

# boomerang

boomerang

jest nazwą handlową zastrzeżoną przez Przedsiębiorstwo Techniczne - Handlowe

MATT

the purpose of the joystick	typ B -	1	2	A	B	C	X	W	Z	Y	comments
-----------------------------	---------	---	---	---	---	---	---	---	---	---	----------

## AMIGA

home computers: Amiga, Atari, Commodore, some TV games (eg Rambo, Terminator) etc.	101	without function	without function	single fire	single fire	single fire					contact joystick with a single fire
	102	without function	without function	auto fire	auto fire	single fire					as above + autofire
	103	signaling fire	signaling power	auto fire	auto fire	single fire					as above + light

## PC

IBM PC computers	201				fire II	fire I					
	202	vertical calibration knob V	horizontal calibration knob H	change of button functions	fire B	fire A	fire D				fire C
	203						fire L	fire D	fire C		fire R

## CONSOLES

Amiga CD 32	432	start/stop ▶▶	green button 3 1 2	red button ⏴	blue button □	yellow button ◻	◀◀				▶▶
Nintendo, Pegasus 777, Dendy, Family Game, Super Famcom	501	select	start	change of the functions of buttons B and C: single fire to autofire	fire I	fire II					
Pegasus 502, IQ 502, Hunter, Lifa SM-SSS-II	502										
Sega 8 Bit Zhilton	503										
Sega Mega Drive II Sega Super Drive	603	start	start	A	B	C					
Jaguar	701	pause	option	C	B	A					

It is produced in the following versions:  
P popular (1m cable, black housing, foil packaging)

L luxury (2m cable, black or gray housing, carton package + joystick and spherical cover)

3 months warranty

